



LACOSTE WATCHES  
OPERATING INSTRUCTIONS, CARE & MAINTENANCE,  
AND WARRANTY & SERVICE INFORMATION

# LACOSTE WATCHES

Lacoste has a unique heritage in the sports fashion market. Developed with the meticulous attention to function and detail, the water-resistant Lacoste watch collection offers easy, elegant designs that reflect Lacoste's style codes and trademark crocodile logo – one of the most recognized brand symbols in the world.

Congratulations on your purchase.

## CONTENTS

### OPERATING INSTRUCTIONS

- (1) **2- AND 3-HAND MODELS**
- (2) **DATE/DAY – DATE MODELS**
- (3) **DUAL TIME MODELS** – With GMT 24-hour and minute hand
- (4) **MULTI-EYE MODELS TYPE A** – With date/24-hour hand
- (5) **MULTI-EYE MODELS TYPE B** – With day/date/24-hour hands
- (6) **MULTI-EYE MODELS TYPE C** – With 24-hour hand without pushers
- (7) **ANALOG CHRONOGRAPHS TYPE A** – Analog chronograph minutes/seconds counters/24-hour hand/date
- (8) **ANALOG CHRONOGRAPHS TYPE B** – Analog chronograph 1/10 Second
- (9) **ANALOG CHRONOGRAPHS TYPE C** – Analog chronograph with 30-minute counter and date
- (10) **ANALOG-DIGITAL MODELS** – With pushers
- (11) **DIGITAL MULTI-FUNCTION MODELS** - With 10-digit LCD display
- (12) **APPLE WATCH STRAPS**
- (13) **SPECIAL FEATURES**
  - Screw Down Crown
  - Mesh Bracelet Sliding Clasp
  - Solar Movement

### CARE AND MAINTENANCE

### WARRANTY

### OBTAINING SERVICE

## (1) 2- AND 3-HAND MODELS



Figure A



Figure B



Figure C

Legend

- 1, 2 – Crown positions  
H – Hour hand (\* Rotating hour disk placed below the dial)  
M – Minute hand  
S – Second hand

### Crown Positions:

Position 1 - Normal position. Crown pushed into case.

Position 2 - To set TIME: Rotate crown in either direction.

**NOTE:** When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

**Power depletion warning function:** When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible. The watch remains accurate while the second hand is moving at two-second intervals.

## (2) DATE/DAY-DATE MODELS



Figure A



Figure B

### Legend

1, 2, 3 – Crown positions

H – Hour hand

M – Minute hand

S – Second hand

K – Date window

E – Day window

### Crown Positions:

Position 1 - Normal position. Crown pushed into case.

Position 2 - To set DATE: Rotate crown clockwise.

NOTE: For models with DAY/DATE display(s):

Rotate crown clockwise to set DATE,  
and counterclockwise to set DAY.

Position 3 - To set TIME: Rotate crown in either direction.

**CAUTION:** Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

**NOTE:** The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

**Power depletion warning function:** When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible. The watch remains accurate while the second hand is moving at two-second intervals.

Turn the crown in the opposite direction to show the previous day of the week in the desired language.

### (3) DUAL-TIME MODELS

With GMT 24-hour and minute hand



Figure A

Legend

1, 2 – Crown positions

A – Push button to set dual time hour

B – Push button to set dual time minute

H – Hour hand

M – Minute hand

S – Second hand

F – Dual time hour hand (24 hrs)

L – Dual time minute hand

#### Crown Positions:

Position 1 – Normal running position; crown pushed into case.

Position 2 – To set TIME: Time setting and rapid correction of dual time.

Local time is indicated by the hour H, minute M and second S hands, while center-mounted Dual time hands indicate dual time hours and minutes.

After setting or changing the battery, before setting the time, check if the dual time hour hand and dual time minute hand are at «0» (12 o'clock position). If either the dual time hour hand or the dual time minute hand is not in the «0» position, reset it/ them following the following procedure:

1. Pull crown out to position 2.
2. Keep the buttons A & B pressed at the same time for more than 2 seconds, then release the buttons (dual time hands move and return to where they were).
3. Press button A or B to reset the dual time hands to «0» position.  
Button A: dual time hour hands move clockwise.  
Button B: dual time minute hands move clockwise.  
The dual time hands move quickly if the respective buttons are kept pressed.
4. Push crown back in to position 1.

#### To set local time:

1. Pull crown out to position 2, watch stops.
2. Rotate crown in either direction to move hands to desired time.
3. Push crown back in to position 1; watch restarts, now set to correct time.

#### To set dual time:

1. Crown should be in position 1.
2. Adjust the Dual time hour hand F by pushing button A to go back 1 hour per push or by pushing button B to advance 1 hour per push.
3. Pull crown out to position 2 when second hand S is at 12 o'clock position.
4. Adjust the Dual time minute hand L by pushing button A to go back 1 minute per push or by pushing button B to advance 1 minute per push.
5. Push crown back into position 1; watch restarts, now set to correct time.

## (4) MULTI-EYE MODELS – TYPE A

With day/date with or without 24-hour hand without pushers



Figure A

3. Turn crown in either direction to move hands to desired time. The 24 hour hand **J** is moving correspondingly with the hour hand. When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
4. Push crown back in to position 1; watch restarts, now set to correct time.

### To set the date:

1. Pull crown out to position 2.
2. Turn the crown counterclockwise to set the date hand. Do not set the date hand between 9.00pm and 2.00am. The date hand will not move back by turning the crown clockwise.
3. Push crown back in to position 1; watch restarts, now set to correct date.

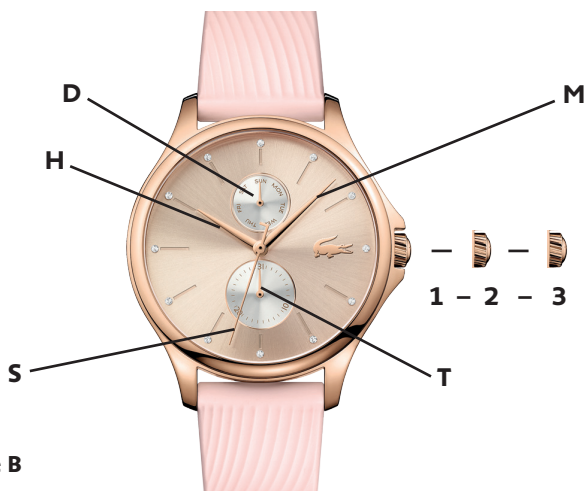


Figure B

### Legend

- 1, 2, 3 – Crown positions  
**H** – Hour hand  
**M** – Minute hand  
**S** – Seconds hand  
**J** – 24 Hour hand  
**T** – Date hand  
**D** – Day hand

### Crown positions:

- Position 1 – Normal running position; crown pushed into case.  
 Position 2 – To set DATE: Rotate crown clockwise.  
 Position 3 – To set TIME: Rotate crown in either direction.

### To set the time:

1. Pull crown out to position 3 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown clockwise to advance the hour and minute hands until the day hand is set to the desired day of the week, if applicable for your model. The day hand will not move back by turning the crown counterclockwise.

## (5) MULTI-EYE MODELS – TYPE B

With day/date/24-hour hands



Figure A

Legend

1, 2 – Crown positions

A – Push button to set the day

B – Push button to set the date

H – Hour hand

M – Minute hand

S – Second hand

T – Date hand

J – 24-hour hand

D – Day hand

### Crown Positions:

Position 1 - Normal position. Crown pushed into case.

Position 2 - To set TIME: Rotate crown in either direction.

### To set the time:

1. As soon as the second hand reaches 12 o'clock, pull the crown out to position 2; watch will stop.
2. Turn crown in either direction to move hands to correct time, taking AM/PM into consideration.
3. Push crown back into position 1.

### To set the day and the date:

1. Press pushbutton A to set the day. Each press and release will advance the Day hand by one day.
2. Press pushbutton B to set the date. Each press and release will advance Date hand by one number.

**IMPORTANT:** Never correct the Date when the time is between 9pm and 4am when automatic calendar changes are in progress; doing so could damage the mechanism.

3. Following a month with fewer than 31 days, you will need to adjust the Date.

## (6) MULTI-EYE MODELS – TYPE C

With 24-hour hand without pushers



Figure A

Legend

1, 2 – Crown positions

H – Hour hand

M – Minute hand

S – Second hand

J – 24-hour hand

### Crown Positions:

Position 1 - Normal position. Crown pushed into case.

Position 2 - To set TIME: Rotate crown in either direction.

### To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown clockwise to advance the hour and minute hands to the correct time. If applicable, make sure to respect AM/PM.
3. Push crown back into position 1.

## (7) ANALOG CHRONOGRAPHS – TYPE A

With day/date/24-hour hand



Figure A



Figure B

Legend

- 1, 2, 3 – Crown positions
- Button A – Start/Stop
- Button B – Reset
- H – Hour hand
- M – Minute hand
- S – Second hand
- P – Chronograph Minutes Counter
- Q – Chronograph Seconds Counter
- F – 24-Hour hand

Crown position 3 is only applicable with date function.

### Crown Positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: if no date function.

To set DATE: applicable with date function.

Position 3 - To set TIME: applicable with date function.

The time measured indicated by the stopwatch hands is independent from the center hands.

The stopwatch can measure up to 60 minutes.

### To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown in either direction to move hands to desired time.  
\*If applicable for your model, make sure to respect AM/PM  
\*Do not press any button, otherwise the chronograph hands will move.
3. Push crown back in to position 1; watch restarts, now set to correct time.

### To set the date (if applicable):

If your watch has a date window, your crown will have 3 positions.

Position 2 is used to set the date:

1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date appears.

**Crown Position 3 is used to set the time as per above explanation.**

### Simple Chronograph Function:

To measure the duration of a single, non-stop event (up to 60 minutes):

1. Press pushbutton A to start chronograph.
2. Press pushbutton A a second time to stop chronograph.
3. Press pushbutton B to reset chronograph hands to zero.

### Measuring Cumulative Times:

1. Press pushbutton A to start chronograph.
2. Press pushbutton A to stop chronograph timing.
3. Press pushbutton A to restart.
4. Repeat steps 2 and 3 as many times as desired.
5. When through timing, press button B to reset chronograph hands to zero.

### Measuring Split Times:

1. Press pushbutton A to start chronograph.
2. Press pushbutton B to momentarily stop chronograph and read an intermediate or split time.
3. Press pushbutton B to restart; chronograph hands will advance rapidly to catch up with ongoing event.
4. Repeat steps 2 and 3 to take as many intermediate or split times as desired.
5. Press pushbutton A to stop chronograph timing.
6. Press pushbutton B to reset chronograph hands to zero.

## (8) ANALOG CHRONOGRAPHS – TYPE B

Chronographs 1/10 Second



Figure A

Legend

- 1, 2, 3** – Crown positions  
**Button A** – Start/Stop  
**Button B** – Reset  
**H** – Hour hand  
**M** – Minute hand  
**S** – Second hand  
**P** – Chronograph Minutes hand  
**Q** – Chronograph Seconds hand  
**X** – Chronograph 1/10-of-a-seconds Chronograph hand

### Crown Positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: if no date function.

To set DATE: applicable with date function.

Position 3 - To set TIME: applicable with date function.

**The time measured indicated by the stopwatch hands is independent from the center hands.**

**The stopwatch can measure up to 60 minutes.**

**The stopwatch measures in 1/10 second increments.**

### To set the time:

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown in either direction to move hands to desired time.  
If applicable for your model, make sure to respect **AM/PM**  
Do not press any button, otherwise the chronograph hands will move.
3. Push crown back in to position 1; watch restarts, now set to correct time.

### To set the date (if applicable):

If your watch has a date window, your crown will have 3 positions. Position 2 is used to set the date:

1. Pull crown out to position 2.
2. Turn crown clockwise until the correct date appears.

Crown Position 3 is used to set the time as per above explanation.

### Simple Chronograph Function:

To measure the duration of a single, non-stop event (up to 60 minutes):

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **A** a second time to stop chronograph.
3. Press pushbutton **B** to reset chronograph hands to zero.

### Measuring Cumulative Times:

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **A** to stop chronograph timing.
3. Press pushbutton **A** to restart.
4. Repeat steps 2 and 3 as many times as desired.
5. When through timing, press button **B** to reset chronograph hands to zero.

### Measuring Split Times:

1. Press pushbutton **A** to start chronograph.
2. Press pushbutton **B** to momentarily stop chronograph and read an intermediate or split time.
3. Press pushbutton **B** to restart; chronograph hands will advance rapidly to catch up with ongoing event.
4. Repeat steps 2 and 3 to take as many intermediate or split times as desired.
5. Press pushbutton **A** to stop chronograph timing.
6. Press pushbutton **B** to reset chronograph hands to zero.

## (9) ANALOG CHRONOGRAPHS – TYPE C

Chronograph with 30-minute counter and date



Figure A

Legend

- 1, 2, 3 – Crown positions  
Button A – Start/Stop  
Button B – Reset  
H – Hour hand  
M – Minute hand  
S – Second hand  
P – Chronograph Minutes hand  
K – Date Window

### Crown positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set DATE: Rotate crown clockwise.

Position 3 - To set TIME: Rotate crown in either direction.

### To set the time:

1. Pull crown out to position 3. Watch will stop.
2. Turn crown in either direction to move hands to correct time.
3. Push crown back into position 1.

### To set the date:

1. Pull crown out to position 2.
  2. Turn crown clockwise until the correct date.
- IMPORTANT: Never correct date between 9pm and 3am when automatic calendar changes are in progress; doing so could damage the mechanism.
3. Push crown back into position 1.

### Chronograph Function:

NOTE: After 2 hours of continuous running, the chronograph stops and resets automatically to save battery.

### Measuring Cumulative Times:

To measure the combined time of a series of shorter events:

1. Press pushbutton A to start chronograph.
2. Press pushbutton A to stop chronograph and read elapsed time.
3. Press pushbutton A to resume measurement.

4. Repeat steps 2 and 3 to add each interval of time.

NOTE: Each time you stop chronograph, chronograph hands will indicate total accumulated time.

5. After final reading, push button B to reset chronograph hands.

### Measuring Split Times:

To take intermediate time readings as an event progresses:

1. Push button A to start timing.
  2. Push button B to stop chronograph and read split time.
- NOTE: Chronograph continues to run in background.
3. Push button B to restart; chronograph hands to catch up with ongoing event.
  4. Repeat steps 2 and 3 to take any additional split times.
  5. Push button A to stop chronograph.
  6. Push button B to reset chronograph hands.

## (10) ANALOG-DIGITAL MODELS

With pushers



Figure A

Legend

1, 2 – Crown positions

Button A – Reset

Button B – Mode

Button C – Light

Button D – Start/Stop

H – Hour hand

M – Minute hand

S – Second hand

### Crown positions:

Position 1 - Normal running position; crown pushed into case.

Position 2 - To set TIME: Rotate crown in either direction.


This watch offers the following features and functions:

- 6 digits LCD display, time & date
- Daily alarm and hourly chime
- Snooze function
- 12/24 hourly format selectable
- 1/100 of a second Chronograph with split functions
- EL (Electro – Luminous) backlight

### To set the time (ANALOG):

1. Pull crown out to position 2 when the second hand is at the 12 o'clock position, watch stops.
2. Turn crown clockwise to advance the hour and minute hands to the correct time. If applicable, make sure to respect AM/PM
3. Push crown back to the normal position 1

### OPERATING INSTRUCTIONS

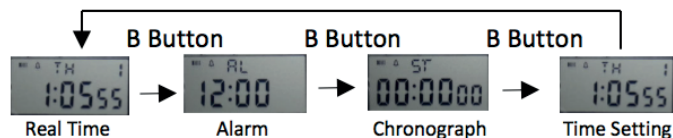

**NOTE:** In any mode, press the button C to activate the EL backlight for 3 seconds.

### Time Setting (DIGITAL):

In time setting mode, "second" will be firstly flashing. Press D key to reset second to zero.


The setting sequence is as follows:

Second > Minute > Hour > Day > Month

1. Press A key to adjust the flashing item.

**NOTE:** When resetting second at the range of 30 to 59, minute will be added 1. When setting hour, "H" is for 24 hourly format; "A" and "P" are for 12 hourly format.

### Real time mode:

1. Press A key to display alarm.
2. Press D key to display date.
3. In time mode, press A & D simultaneously to turn on/off alarm function which will indicate  for ON.

### Alarm mode:

1. Press B key to enter alarm mode, "Hour" will flash.
2. Press A key to select "Hour" or "Minute" setting.
3. Press D key to adjust the flashing item.
4. Press A key to confirm.
5. Press B key to exit this mode.

**NOTE:** Bell icon  is displayed when alarm function is activated.

When alarm is triggered, press A key to stop alarm or press D key to activate snooze function which will be triggered after 5 minutes.

**NOTE:** If no key is pushed, the alarm will stop automatically after 1 minute. In Time mode, hold A and then press D to activate/deactivate the hidden chime function.

### Chronograph Function:

1. The display range of the chronograph is 23 hours, 59 minutes, 59.99 seconds.
2. Stopwatch time interval is 0.01 second for the first 30 minutes and 0.1 second from 30 minutes to 24 hours.
3. Press D key to start running.
4. For single non-stop event,
  - press D to stop running and then press A key to reset chronograph to zero.
5. For split-time event,
  - press A key to split counting and then press D key to resume the running.
  - press D key and then A key to stop and reset chronograph to zero.

**NOTE:** When chronograph is running, press B key to exit this mode. Chronograph is running behind the display.

## (11) DIGITAL MULTI-FUNCTION MODELS

With 10-digit LCD display



Figure A

Legend

A, B, C – Setting/operating buttons

These sporty digital models with 10-digit LCD displays offer the following features and functions:

- Choice of 12H or 24H time display format
- Auto Calendar with Month, Date and Day
- Daily Alarm and Hourly Chime
- 1/100 of a Second Chronograph with Split Functions
- EL (Electro-Luminous) Backlight

### OPERATING INSTRUCTIONS

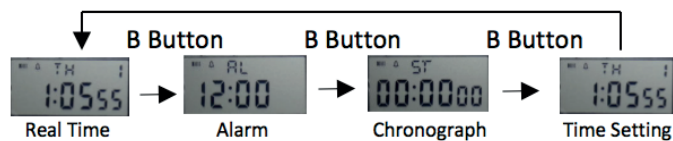


Diagram 1

NOTE: In any mode, press the button A to activate the EL back-light for 3 seconds.

### REAL TIME MODE

In Real Time Mode:

1. Press button C to toggle between 12HR and 24HR display format.

### ALARM MODE

In Alarm Mode:

1. Press C button to turn on/off Alarm (|||||) or Chime (🔔).
2. Press A button to select Hour or Minute field.
3. Press C button to adjust the flashing item.
4. Press A button to confirm.
5. Press B button to return to Real Time mode.

NOTE: When the set time is reached, the alarm will sound for 20 seconds. Pressing any button stops the alarm chime.

### CHRONOGRAPH MODE

In Chronograph Mode:

1. The display range of the Chronograph is 23 hours, 59 minutes, 59.99 seconds.
2. Press the C button to Start/Stop running time.
3. When stopped, press A button to reset.
4. When running, press A button to split count.
5. Press C button to exit split count and stop running; press A button to display all counts, press A button again to reset.
6. When running, press B button to return to Real Time Mode. Time keeping will continue running in the background.

Time Setting Mode:

When time setting mode is entered, the seconds field will begin flashing.

1. Press A button to select the next item in the following sequence:


Second > Minute > Hour > 12/24H Format > Month > Day > Year

### Diagram 2

2. Press C button to adjust the flashing field.

NOTE: In the seconds field, pressing the C button will reset seconds to zero; If the seconds field is reset at greater than 30s, the time will be rounded up by 1 minute.

## (12) APPLE WATCH STRAPS

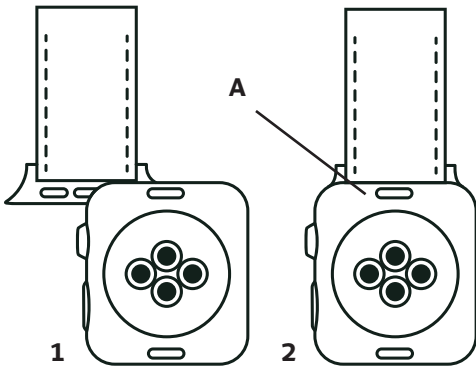

### COMPATIBLE WITH APPLE WATCH


**Your Lacoste APPLE watch strap is easy to attach:**

1. Turn your apple watch around and slide strap into case – you will feel a slight click when correctly positioned inside the case.
2. To remove, simply press down on **A**, while sliding strap outwards.


APPLE WATCH IS A TRADEMARK OF APPLE INC.,  
REGISTERED IN THE U.S. AND OTHER COUNTRIES.

## (13) SPECIAL FEATURES

### SCREW DOWN CROWN

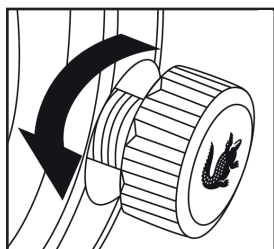

A

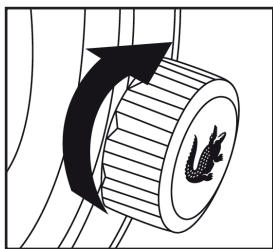

B

Some models are equipped with a special screw-down crown that helps seal the case against water and moisture. Before attempting to set the time or date, you must first unlock the screw-down crown by turning it counterclockwise until it loosens (approximately six rotations).

Unlocking is not required with standard crowns.

A. To unlock the crown:

Rotate the crown counterclockwise (left) until it releases from the case.


B. To re-lock the crown after time/date setting:

Rotate the crown clockwise (right) while pushing it in, and tighten firmly.

## (13) SPECIAL FEATURES


### MESH BRACELET SLIDING CLASP

The mesh bracelets found on select models feature a hooking jewelry clasp that allows you to size the bracelet by sliding the pin-bar half of the clasp along the bracelet to achieve a customized fit.

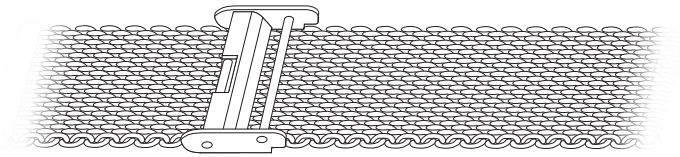


Above: Open mesh bracelet side with pin-bar half of sliding clasp locked in position.


**To size the bracelet:**

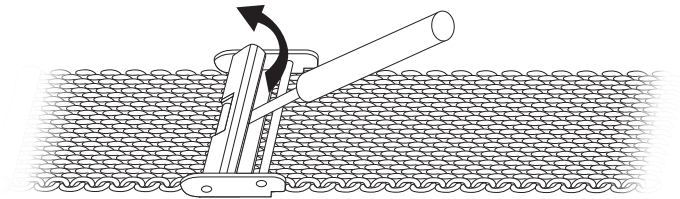

1. Use tool such as a small flat-head screwdriver to pop open metal plate on pin-bar half of clasp, releasing the clasp position locking mechanism.

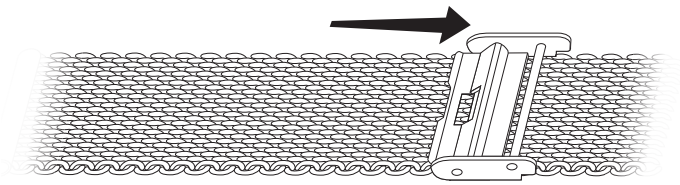

2. Slide pin-bar half of clasp along the mesh bracelet in either direction to desired position.

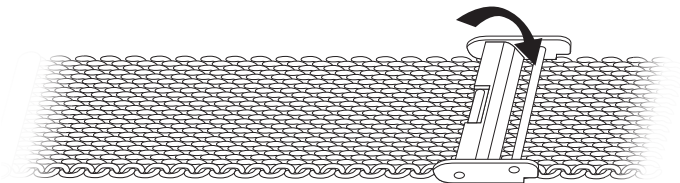

3. Close metal plate, locking the pin-bar half of the clasp in new position on the bracelet.

## (13) SPECIAL FEATURES

### SOLAR MOVEMENT

#### SOLAR-POWERED WATCH

Your watch contains a solar cell underneath the dial to convert any form of light into electrical energy and store the power in a secondary battery.

#### BATTERY REPLACEMENT

Unlike conventional quartz watches, your watch does not use a silver oxide battery, thus eliminating the need for battery replacement.

#### RUNNING TIME

Expected running time from full charge to stoppage will be approximately 4 months (assuming no exposure to light during that time).

#### POWER DEPLETION WARNING FUNCTION

The two-second intervals movement of the second hand is a signal of energy depletion.  
The watch continues to work for approximately 2 weeks.

#### WARNING

Never use a battery other than the rechargeable cell specified for use in your watch. The rechargeable cell should never be removed from the watch. Do not dispose of the rechargeable cell with ordinary garbage. Please follow the instructions of your municipality regarding collection of batteries.  
Avoid exposing the watch to excessive heat.

#### INDICATIVE GUIDANCE OF CHARGING TIME

Illumination (Lx)	Source of light	Environment	Full charge (Apprx hrs)	Steady operation (Apprx hrs)	1 day of power (Apprx min)
700	A fluorescent lamp	Inside the office	-	18	69
3000	A fluorescent lamp	30W 20cm	52	4	15
10000	Sun light	Cloudy	16	1.5	5
100000	Sun light	Fine weather	5.3	0.5	2

#### BATTERY INDICATOR AND DURATION

Press push button B for more than 1 second, after 2 seconds hand will return automatically.

Battery level	Power reserve
High (yellow)	90 days or more
Middle (orange)	30-90 days
Low (red)	30 days or less

## CARE AND MAINTENANCE

Your LACOSTE WATCH has been developed with meticulous attention to quality, function and detail. Please read the following information and instructions carefully to learn about the features, proper care and operation of your new timepiece. For additional information on service and repairs, please see the Service and Warranty section.

Never open the watch yourself. If your watch needs repair or adjustment, take or mail it directly to an authorized Service Center. For a complete worldwide listing, visit us online at [www.mgiservice.com](http://www.mgiservice.com)

### SHOCK

All of our watches have shock-resistant movements and are tested to meet international standards for shock resistance.

### MAGNETISM

The exposure of a timepiece to a strong magnetic field will affect its time-keeping, and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field; an automatic or hand-wound mechanical timepiece, however, may require demagnetization before it will operate again.

### WATER RESISTANCE

All our watches meet international standards for water resistance to at least 3ATM / 30M/ 99 feet, so faucet spray or rain won't hurt them as long as the case, crown and crystal remain intact. Timepieces marked water resistant to 50M / 5ATM/ 165 feet may be worn while showering or swimming, but not scuba diving.

CAUTION: Do not operate your watch crown or the push-buttons on a chronograph or multi-function model when the watch is under water, or it will not remain water resistant.

Water resistance applies only to the watch case; some watch straps should not be worn under water or subjected to wet conditions. Please see **STRAP CARE**.

Avoid exposing your watch to sudden and excessive temperature variations.

Do not drop your watch or bang it against a hard surface. Water resistance must be rechecked after every violent shock.

Carefully wipe your watch using a soft cloth dampened with fresh water after exposure to chlorine or sea water.

### OTHER PRECAUTIONS:

If your watch is equipped with a screw-down crown, be sure to screw it/them back down into the case after every operation.

### STRAP CARE

While the life span of a watch strap depends on your care and wearing habits, as well as climate in which you live, proper care will extend its life.

Leather strap should be kept dry. Exposure to water may cause a leather watch strap to become brittle and eventually break. To preserve the finish of the leather, contact with perfumes should be avoided. Following exposure to chlorinated or salt water, gently damp wipe your leather strap with fresh water, and air dry.

To help preserve the natural elasticity and quality of a silicone or rubber strap, rinse it using a soft cloth soaked in fresh water following exposure to salt water, chemicals or abrasive substances.

Use warm water and a neutral pH soap applied to a soft cloth to gently clean a white silicone or rubber strap; then wipe with a second clean cloth dipped in warm water, or rinse carefully under warm running water. Contact with acetone and ethyl alcohol should be avoided.

NOTE: Watch straps are not covered by the watch warranty.

### BATTERY INFORMATION

Your quartz analog watch or chronograph has a battery specially designed for watches. It will last approximately 18-36 months under normal use.

## CARE AND MAINTENANCE

**NOTE:** Frequent use of special functions, like the stopwatch timer on chronograph models, may shorten battery life.

**End-of-life feature:** The second hand on many models will start to move haltingly in 4 second increments when the battery is almost exhausted, signaling the need to have it replaced.

**Battery replacement:** Take or send your watch to an Authorized Service Center to have battery changed – your old battery will be disposed of/recycled properly. Do not attempt to change the battery yourself.

**Collection and treatment of end of life quartz watches\***



This product should not be discarded with household waste. To protect the environment and human health, it must be returned to a local authorized collection system for proper recycling.

\*Valid in the EU member states and in any countries with corresponding legislation.

## WARRANTY INFORMATION

### WARRANTY INFORMATION

Not only is each Lacoste watch beautiful in design, it is crafted with quality materials and components to offer precise, reliable performance. We proudly stand behind every Lacoste watch we sell.

#### **Lacoste Watches Limited Warranty**

Lacoste Watches warrants to the original consumer that, for a period of two (2) years from the date of purchase, his/her watch will be free from defects in materials and workmanship that prevent the watch from functioning properly under normal use.

Our responsibility for defects covered by this warranty is limited to repairing or (at the sole discretion of Lacoste Watches) replacing the defective watch, free of charge.

This limited warranty does not cover analog batteries, straps, bracelets, crystals, gold- or ionic-plating or PVD finishing, cosmetic issues such as scratches or normal wear and tear, or any damage arising from accidents or misuse, or from any alteration, service or repair performed by any party other than an Lacoste Watches Authorized Service Center.

This warranty is void if the timepiece was not purchased from an Authorized Lacoste Watches Dealer, as evidenced by valid proof of purchase – a dated sales or gift receipt showing the name of the retailer and an identifying style number for the Lacoste watch.

Any other warranty provided by the retailer is entirely their responsibility. No person or company is authorized to change the terms of this warranty. This warranty gives the consumer specific legal rights. He/she may also have other statutory rights which may vary from state to state and country to country. However, to the extent not prohibited by law, this limited warranty is exclusive and in lieu of all other warranties, oral, written, statutory, express or implied (including without limitation the warranties of merchantability and fitness for a particular purpose), all of which are expressly disclaimed.

## OBTAINING SERVICE

### UNDER WARRANTY

Should warranty service be required, pack your watch properly (see below) and send it along with (1) the original sales receipt and (2) a completed copy of the Lacoste Watches Service Request Form(s) to the nearest Lacoste Watches Service Center. A list of authorized service centers can be found on this website – just return to the Lacoste Watches service website home page and click on the Warranty and Service Information link.

### OUT OF WARRANTY

The Lacoste Watches Service Center can also perform repairs not covered by the Lacoste Watches warranty as well as service after the expiration of the warranty period. Should your watch require parts or service not covered under the terms of your warranty, a written estimate will be sent for your approval and payment before the work is undertaken. Please copy and use the form(s) from this file.

### BATTERY REPLACEMENT

The Lacoste Watches Service Center can also change the battery on your Lacoste watch, for a fee.

### PACKING YOUR WATCH

Pack your watch securely in padded wrapping materials for protection against shock. Be sure to include a completed copy of the Lacoste Watches Service Request Form.

### INSURING YOUR WATCH

We recommend that you use registered mail and insure your watch for its full replacement value.

### ADDITIONAL INSTRUCTIONS

Charges will be made for all repairs unless the original dated purchase or gift receipt showing the name of the retailer and an identifying watch style number is returned with the product, and repairs are covered under terms of warranty. Authorized Service Center locations can be accessed from the link on the [www.mgiservice.com/lacoste](http://www.mgiservice.com/lacoste) homepage.

## OBTAINING SERVICE

### LACOSTE WATCHES SERVICE REQUEST FORM

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State/Province \_\_\_\_\_ Country \_\_\_\_\_ ZIP/Postal Code \_\_\_\_\_

E-mail \_\_\_\_\_ Phone (\_\_\_\_\_) \_\_\_\_\_

Watch Model \_\_\_\_\_

What needs service, replacement or repair: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_